

Product Code

Number

DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County  
Ningbo 315600 China    Made in China  
info@nbdeli.com    www.deliworld.com

22

PAP

KEEP FOR  
FUTURE USE

Version: 1.0  
Date: 06-2024

deli

Instruction Manual

User Manual

■ Easy to operate    ■ Easy to use    ■ Safe and reliable

Welcome to use our series of safes, cabinets, and storage boxes. Please read this instruction manual carefully before use and operate according to the instructions.

此联沿虚线剪下

由经销商保管

DELI GROUP

Product Warranty Card

Product Information	Product Name		Serial Date		
	Product Model		Manufacturing Date		
Customer Information	Company Name		Contact Person		
	Address		Contact Number		
Sales Information	Distributor Name		Contact Person		
	Address		Contact Number		
	Sales Date		Invoice Number		
Repair Record	Fault Condition	Repair Result	Customer Signature	Technician Signature	Date

DELI GROUP

Product Warranty Card

Dear user,  
Thank you for purchasing our company's product. To ensure your satisfaction and benefits, if your product malfunctions due to quality issues, you can contact your local dealer or authorized service center with your warranty card.  
Warranty Instructions:  
1.Our company provides free warranty services, including repairs and parts replacement, for any malfunction that occurs under normal use within one year from the date of purchase;  
2.This warranty card and the purchase invoice are the proof of our after-sales service to customers. This card must be filled out with the required information in detail and stamped by the dealer to be valid;  
3. In the following circumstances, free warranty service is not applicable, and paid repairs will be required:  
① The product is beyond the warranty period.  
② The product is damaged due to improper use, maintenance, or storage that does not comply with the product's user manual.  
③ The product malfunction or damage is caused by force majeure.  
④ Wearable parts and accompanying accessories.  
⑤ The product is damaged due to excessive twisting or improper use.  
This warranty card is issued together with the product, with one card for each product. To ensure that you can fully enjoy the rights to our free warranty service, please keep this card properly. No replacement will be provided for lost cards.


Purchase Date: \_\_\_\_\_ (Year) \_\_\_\_\_ (Month) \_\_\_\_\_ (Day)

I Product Unpacking ..... 01  
II Product Diagram ..... 02  
III First Use ..... 03  
IV Insert the Battery ..... 03  
V Password Setting ..... 03  
VI Door closing operation ..... 04  
VII Hidden Password Functionality ..... 04  
VIII Deleting Incorrect Passwords ..... 04  
IX Alarm Function ..... 05  
X Battery Replacement ..... 05  
XI Emergency Opening ..... 06  
XII Usage Precautions ..... 06  
XIII Common Faults and Troubleshooting Methods ..... 07

Contents

## I. Product Unpacking

After unpacking the package, please check whether the product appearance is intact and count all the accessories. If there are any defects, please contact the dealer.

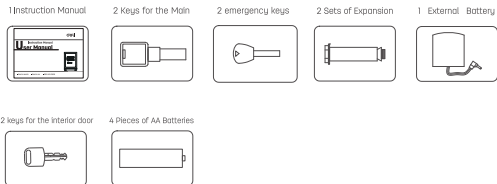

- Notes:**
1. Products without an internal door inside the box do not include keys for the internal door.
  2. Products with a password-enabled internal door inside the box do not include keys for the internal door.

01

## Product Warranty Card


Product Information	Product Name		Serial Date		
	Product Model		Manufacturing Date		
Customer Information	Company Name		Contact Person		
	Address		Contact Number		
Sales Information	Distributor Name		Contact Person		
	Address		Contact Number		
	Sales Date		Invoice Number		
Repair Record	Fault Condition	Repair Result	Customer Signature	Technician Signature	Date

## XIII. Common Faults and Troubleshooting Methods

Fault Phenomenon	Fault Cause	Solution
When pressing the number keys to enter the password, there is no response	Batteries are Out of Power	To use an external battery box or the emergency key to open the electronic combination lock and replace the batteries.
	The batteries are installed with the wrong polarity	To install the batteries in the correct manner.
	Circuit board failure	Please contact the maintenance department.
The emergency key cannot be inserted or removed	There are foreign objects in the lock hole	To remove foreign objects from the lock hole
	The key has not been turned to the limit position	Please re-insert it using the correct method
The electronic lock is unlocked but the box door cannot be opened	The handle has not been rotated to the limit position	Please rotate the handle to the limit position
	Rotating the handle for over 7 seconds has completed the reset of the electronic lock	Please re-enter the password and rotate to the limit position within 8 seconds
The alarm does not sound	Batteries are Out of Power	Please replace the batteries
	The batteries are installed with the wrong polarity	To install the batteries in the correct manner

07

## II. Product Diagram

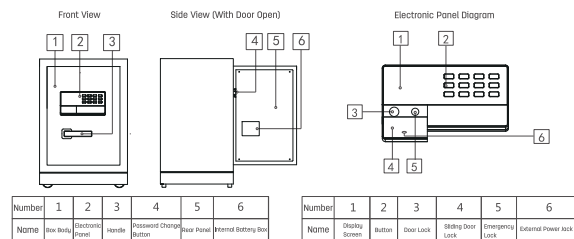

02

## III. First Use

1. Push the sliding cover of the door lock down to the designated position;
2. Insert the main lock key and the emergency key into the respective keyholes located on the panel. First, turn the emergency key clockwise, and then turn the main lock key and the handle clockwise to open the door; (For products without a handle, simply turn the main lock key clockwise to open the door)

## IV. Insert the Battery

1. Install 4 pieces of AA Batteries into the internal battery box located on the back of the door according to the correct polarity (positive to positive, negative to negative). After the batteries are installed correctly and the power is connected, a "beep" sound will be heard, indicating that the power has been turned on.
2. Enter the factory default password "12345678" on the keypad.
3. After entering the password, press the "E" key to confirm. If the password is entered correctly, the display screen will show "OPEN". At this time, the user needs to turn the handle clockwise within the next 6 seconds to open the door lock.

## V. Password Setting

1. After entering the factory default password "12345678" and the screen displays "OPEN", please set a new password within 30 seconds after opening the door;

03

## XI. Emergency Opening

1. When the battery inside the box is depleted and it cannot be operated, please use an external battery pack for power supply. Insert the plug of the external battery box into the power socket located under the panel, and enter the correct password to open the door.
2. In case of a malfunction of the electronic system or if the password is forgotten, please use the emergency key to open the door. The method of opening the door is the same as during the first-time use.

## XII. Usage Precautions

1. Please do not leave the user manual, master lock key, emergency key, and external battery box inside the box. They should be stored separately in a safe place;
2. If the product is not going to be used for a long time, please remove the battery to prevent any leakage that may damage the electronic system;
3. For safety reasons, please ensure that the cabinet is securely fixed to a sturdy concrete wall;
4. Please do not store excessive cash or valuables when there is no one on duty or without a remote alarm system.



06

## IX. Alarm Function

### 1. Password Entry Error Alarm

Each time an incorrect password is entered, the display screen will show "Error";  
If an incorrect password is entered consecutively three times, an alarm will sound for 50 seconds;  
During the alarm, entering the correct password will stop the alarm.

### 2. Alarm Activated by Vibration

In standby mode, pressing the "\*" key and seeing "ALERT ON" displayed on the screen indicates that the vibration alarm function is activated;

When the product is subjected to external force vibration, the alarm will sound for 50 seconds;  
During the alarm, entering the correct password will stop the alarm and automatically turn off the vibration alarm function.

## X. Battery Replacement

When the voltage of the built-in battery drops to a certain level, the display will show "Lo bat" after entering the password, indicating insufficient battery voltage. Please replace it with a new battery as soon as possible. (We recommend using a 5# alkaline battery.)

2. Press the code change button located on the rear cover plate of the door, and the display screen will show "set";
3. Enter a 1-8 digit password;
4. Press the "\*" key to confirm, and the display screen will show "Info1", indicating that the new password has been successfully set.

**Note: After the password is set, please verify the new password to ensure its accuracy before locking the door.**

## VI. Door closing operation

Closing the Door:

1. Close the door of the box;
2. (a) For products with handles: Rotate the handle clockwise, then rotate the main lock key counterclockwise and pull it out;  
(b) For products without handles: Rotate the main lock key counterclockwise and pull it out.

## VII. Hidden Password Functionality

1. In standby mode, when pressing the "H" key to enter the password, the display screen will show "-" instead of displaying the numbers.
2. After the door is opened, the display automatically resumes showing digits.

## VIII. Deleting Incorrect Passwords

During the operation, if an incorrect password is entered, before pressing the "H" key to confirm, you can press the "\*" key to delete. Pressing the "\*" key once will delete the entire password line, and you will need to re-enter the correct password to open the door.