


Product Code: \_\_\_\_\_

Number: \_\_\_\_\_

# User Manual

## Fingerprint Safe Series

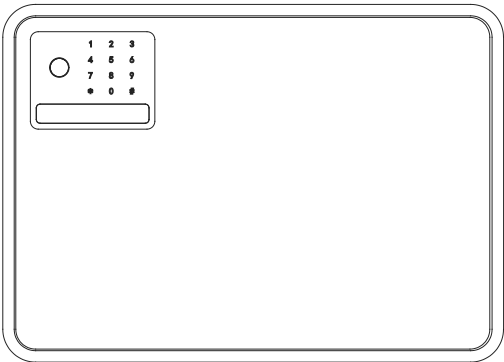

**DELI GROUP CO, LTD.**  
Deli Industrial Zone, Ninghai County,  
Ningbo City, Zhejiang Province, China  
serviceglobal@nbdeli.com  
www.deliworld.com      Made in China




**KEEP FOR  
FUTURE USE**  
Version: 1.0  
Date: 02-2025

### Contents


I. Product Unpacking	1
II. Product Diagram	1
III. First Use	2
IV. Password Setting	2
V. Fingerprint Setting	2
VI. Restore Factory Settings	3
VII. Function Setting	3
VIII. Opening And Closing Door Operation	3
IX. Emergency Opening	4
X. Alarm Function	4
XI. Installation Instructions	5
XII. Usage Precautions	6
XIII. Common Faults and Troubleshooting Methods	6
XIV. After-sales Service	7

Welcome to use our series of safes, cabinets, and storage boxes. Please read this instruction manual carefully before use and operate according to the instructions.

### I. Product Unpacking



### II. Product Diagram

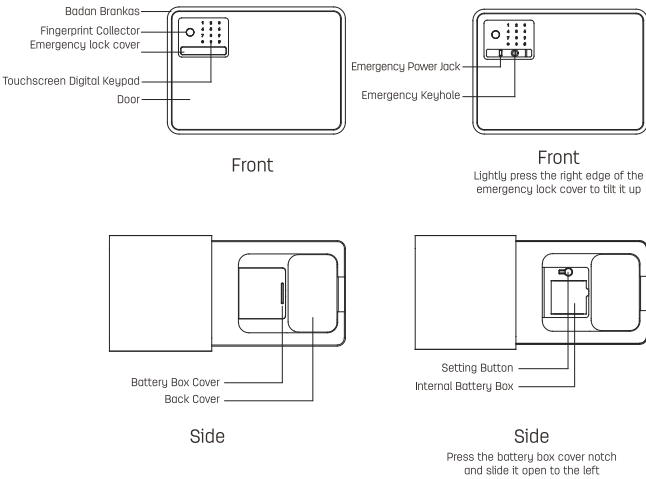

### III. First Us

1. After placing the case, press the right edge of the emergency lock cover to make it warp, insert the emergency key into the lock hole and turn the key counterclockwise to open the case door, then press the notch of the battery box cover and slide it open to the left, and install the 4 pieces of AA batteries into the case to connect the battery box.
2. For ease of use, please store the manual and key in a safe place, not inside the box

### IV. Password Setting

1. Factory password is 12345678
2. Open the door, remove the battery box cover, press the [SET] , enter the 3-8 digit password according to the voice prompts, and then press the [#] key to confirm, enter the password again, press the [#] to confirm, the voice prompts 'New password setting successful' means that the password is set up successfully. If the two passwords are not the same, the voice prompts 'Password error, please re-enter' means that the password is set incorrectly, you need to re-enter the password
3. When the password is entered incorrectly, it can be deleted and re-entered by pressing the [\*] key.

### V. Fingerprint Setting

1. Open the door, remove the battery box cover, press the [Setting Button], press the voice prompts to start registering fingerprints, please use the same finger to press the fingerprint collector in different areas, a total of 5 times, after the completion of the voice prompts 'New fingerprint entry successful' indicates that the fingerprints are set up successfully.
2. A total of 20 fingerprints can be registered

- 2 -

### VI. Restore Factory Settings

Open the door, remove the battery box cover, press and hold the [Setting Button] until the voice prompts 'Restore Factory Setting successful'. All registered fingerprints are cleared, any fingerprints can open the door, please register new fingerprints in time; the set password is automatically changed to the factory password, please set a new password in time.

### VII. Function Setting

1. Vibration alarm: touch the key area to wake up the electronic panel, press the [\*] once, open the vibration alarm, password or fingerprint unlock the vibration alarm is automatically closed
  2. Voice switch: touch the key area to wake up the electronic panel, press the [\*] once and then press the [#] to switch the voice on or off mode.
  3. Composite verification mode: open the door, press the [Setting Button], long press the [0] key until the voice prompts, commonly used to open the door mode press the [1] key, the security mode press the [2] key, the security mode for the password + fingerprints
- Note: Composite Verification Mode cannot be accessed in the case of unregistered fingerprints.

### VIII. Opening And Closing Door Operation

1. Password to open the door: touch the key area to wake up the panel, first press [#], and then enter the password, press [#] to confirm, the voice prompts 'Verification Successful', the door pops open automatically. If the voice prompts 'Verification failed ,please re-enter', that the input password is wrong, need to re-enter the correct password.

- 3 -

2. Fingerprint to open the door

- ① Place the registered finger on the fingerprint collector, after successful fingerprint identification, the aperture lights up green, at the same time, the voice prompts 'Verification Successful', the door pops open automatically; if the voice prompts 'Verification failed ,please re-enter',Indicates that the fingerprint verification is incorrect. You need to verify the fingerprint again
- ② No fingerprints are registered at the factory, any fingerprints can open the door, please add fingerprints in time when using.
3. Composite verification mode to open the door: this mode needs to be in accordance with the password to open the door and fingerprint to open the door at the same time to verify the password and fingerprint, are successfully verified before the door can be opened.
4. Dummy password to open the door: In the process of entering the password, you can enter any password, as long as the password contains the password you set, you can verify the pass, the dummy password can enter a total of 14 digits.
5. Close the door operation: the box door will be pushed closed in place, you can lock the door.

### IX. Emergency Opening

1. When the battery inside the box is exhausted and can not operate, please use external power supply. Insert the plug of Type-c data cable into the corresponding jack and enter the correct password or fingerprint to open the door. Open the door in the same way as the first time.
2. When the electronic system fails or the password is forgotten, please use the emergency key to open the door. Open the door in the same way as the first time

### X. Alarm Function

1. Low Battery Alarm
- ① After opening the door by password or fingerprint, if the battery voltage

- 4 -

is low, the system will indicate by voice that the battery power is low and the user must replace the battery as soon as possible.

- ② If the battery runs out, the system will stop working and you can open the door with external power supply or emergency key.

2. Password and fingerprint error alarm

- ① The maximum number of errors allowed for password verification is 5. After 3 errors, the system plays an alarm tone for 20 seconds, and after 5 accumulated errors the system plays an alarm tone for 20 seconds and locks for 3 minutes, during which the electronic panel cannot be operated.
- ② Five fingerprint errors will cause the alarm to go off for 20 seconds.

3. Vibration alarm


When the vibration alarm is turned on, prying or vibrating the box will generate a vibration alarm and the system will play the alarm tone for 20 seconds.

4. Release the alarm

When the system plays an alarm tone but does not lock, enter the correct password in time to release the alarm.

### XI. Installation Instructions

Always fix the cabinet to a solid concrete wall for safe keeping.

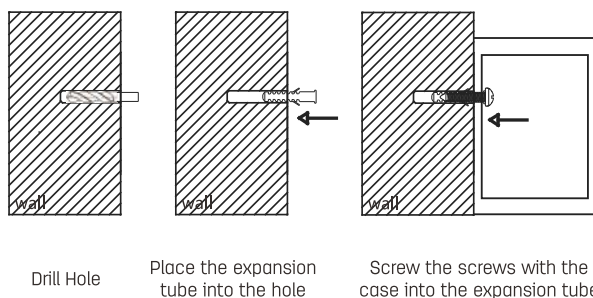

- 5 -

## XII. Usage Precautions

1. The battery should be taken out to prevent the leakage of liquid from damaging the electronic system if the product is left unused for a long time.
2. For safety reasons, please be sure to fix the cabinet on a solid concrete
3. Do not store too much cash and valuables when unattended or without a remote alarm device.

## XIII. Common Faults and Troubleshooting Methods

Fault Phenomenon	Fault Cause	Method of exclusion
No response from pressing numeric keys to enter password/pressing fingerprint capture device	The battery is dead	Open the door with an external power supply or key to replace the battery
	Battery polarity reversed	Insert the batteries in the correct way
	Fault PCB	Please contact the maintenance department
The emergency key cannot be inserted in or removed	Foreign matters in the keyhole	Remove foreign matters from the keyhole
	The key does not turn to the limit position	Please reinsert in the correct way
Electronic combination lock has been opened, the door can not be opened	Faulty electronic panel or jammed door mechanism	Please contact the maintenance department
The alarm does not sound	The battery is dead	Replace the battery
	Battery polarity reversed	Insert the batteries in the correct way

## XIV. After-sales Service

Dear user,

Thank you for purchasing our company's product. To ensure your satisfaction and benefits, if your product malfunctions due to quality issues, you can contact your local dealer or authorized service center with your warranty card.

Warranty Instructions:

1. Our company provides free warranty services, including repairs and parts replacement, for any malfunction that occurs under normal use within one year from the date of purchase;
2. This warranty card and the purchase invoice are the proof of our after-sales service to customers. This card must be filled out with the required information in detail and stamped by the dealer to be valid.
3. In the following circumstances, free warranty service is not applicable, and paid repairs will be required:
  - ① The product is beyond the warranty period.
  - ② The product is damaged due to improper use, maintenance, or storage that does not comply with the product's user manual.
  - ③ The product malfunction or damage is caused by force majeure.
  - ④ Wearable parts and accompanying accessories.
  - ⑤ The product is damaged due to excessive twisting or improper use.

This warranty card is issued together with the product, with one card for each product. To ensure that you can fully enjoy the rights to our free warranty service, please keep this card properly. No replacement will be provided for lost cards.

Purchase Date: \_\_\_\_\_ (Year) \_\_\_\_\_ (Month) \_\_\_\_\_ (Day)

## PRODUCT WARRANTY CARD

Product Information	Product Name		Serial Number			
	Product Model		Manufacturing Date			
Customer Information	Company Name			Contact Person		
	Address			Contact Number		
Sales Information	Distributor Name			Contact Person		
	Address			Contact Number		
	Sales Date			Invoice Number		
Repair Record	Fault Condition	Repair Result	Customer Signature	Technician Signature	Date	

**deli** DELI GROUP CO., LTD.

Cut this copy along the dotted line and keep it in the custody of the dealer

Product Information	Product Name		Serial Number			
	Product Model		Manufacturing Date			
Customer Information	Company Name			Contact Person		
	Address			Contact Number		
Sales Information	Distributor Name			Contact Person		
	Address			Contact Number		
	Sales Date			Invoice Number		
Repair Record	Fault Condition	Repair Result	Customer Signature	Technician Signature	Date	